

TRUST THE EXPERTS.

If you have a heat pump outside your home, the air handler is likely the indoor component comprising your two-part, split system that keeps the indoor temperature of your home comfortable all year long. Most often, air handlers are located in the attic, basement or a dedicated closet, and may closely resemble the shape of a gas furnace. As its name suggests, an air handler "handles" the air inside your home and delivers warm or cool indoor air throughout your entire home. What would we do without delivery!



Air Handler specifications

Air Handlers									
MODELS	NEW R-32 Models							MBVB	MBVK
	230V AHVE/ 230V AHVE*13 Multi-Position	115V AHVE/ 115V AHVE*03 Multi-Position	AMVT AMVT*13 Multi-Position	AMST AMST*13 Multi-Position	AWST/ AWST*13 WALL MOUNT	ACSF/ACST*13 Ceiling-Mount	AMVE Multi-Position		MODULAR BLOWER
Refrigerant	R-410A / R-32 (230V AHVE*13 is R-32)	R-410A / R-32 (115V AHVE*03 is R-32)	R-410A / R-32 (AMVT*13 is R-32)	R-410A / R-32 (AMST*13 is R-32)	R-410A / R-32 (AWST*13 is R-32)	R-410A / R-32 (ACST*13 is R-32)	R-410A	R-410A	R-410A
Furnace Integration Kit required for R-32 compatibility	N/A	N/A	N/A	N/A	N/A	N/A	N/A	•	•
10-Year Parts Limited Warranty*	•	•	•	•	•	•	•	•	•
ComfortBridge™ Compatible	ComfortNet [™] Only	ComfortNet [™] Only	•	N/A	N/A	N/A	•	•	ComfortNet™ Only
ALL-ALUMINUM Evaporator Coil	•	•	•	•	•	•	•	N/A	N/A
Factory-Mounted TXVs	Factory- mounted EEV	Factory- mounted EEV	•	•	•	Factory- mounted TXV included on the ACST*13	Factory- mounted EEV	N/A	N/A
Tonnage	2 to 5 Ton	2 to 5 Ton	2 to 5 Ton	2 to 5 Ton	1 ½ to 3 Ton	1 ½ to 2 ½ Ton	2 to 5 Ton	1 ½ to 5 Ton	1.5 to 5 Ton
Motor Type	Variable- Speed ECM	Variable- Speed ECM	Variable- Speed ECM	9 Tap ECM	Multi-Speed ECM	Direct-Drive, Multi-Speed	Variable- Speed ECM	Variable- Speed ECM	Variable- Speed ECM
UL 60335 2-40 Compliant	•	•	•	•	•	•	•	•	•

^{*} Complete warranty details available from your local dealer or at www.goodmanmfg.com. To receive the 10-Year Parts Limited Warranty, online registration must be completed within 60 days of installation. Online registration and some of the additional requirements are not required in Florida, California, or Québec. The duration of warranty coverages in Texas and Florida differs in some cases.

Additional Information

Before purchasing this appliance, read important information about its estimated annual energy consumption, yearly operating cost, or energy efficiency rating that is available from your retailer.

WARNINGS

Always use a licensed installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.

Use only those parts and accessories supplied or specified by Goodman. Ask a licensed contractor to install those parts and accessories. Use of unauthorized parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.

Read the Product Manuals carefully before using this product. The Product Manuals provide important safety instructions and warnings. Be sure to follow these instructions and warnings.

For any inquiries, contact your local Goodman brand sales office.



